




Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	DV/USB		Shift + 8
	HDD		Shift + 7
	DVD		Shift + 2
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Add/Clear		Exit / Cancel / Clear


Originalfernbedienung Ersatzfernbedienung

	Goto		Text / Goto
	Setup		Setup / OPT /
	Up		Up
	Navigation		Smart / List
	Left / Replay		Left
	Select		OK
	Right / Skip		Right
	Timer		Sleep / Timer
	Down		Down
	Return / P-P		Back / Return
	Timeshift		Picture / Format
	Rec / OTR		Rec / Rec Mode
	Rec To		Shift + Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold
	Pause / Step		Pause / Step / Freeze
	Slow / Sort		Shift + Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Rev		<< / Tune-
	Prev		<< / Preset-
	Vol+		Vol+
	CH+		CH+ / Page+
	Fwd		>> / Tune+
	Next		>> / Preset+
	Vol-		Vol-
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Menu		Menu / Home
	Repeat		Green / APP / Repeat
	PS/IS		Info / Angle
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Mute		Mute / Dimmer
	Display		Display / Media

Originalfernbedienung Ersatzfernbedienung

