


 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Eject		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	EAX		Setup / OPT /
	*/Options		Menu / Home
	Up		Up
	[ ]/Display		Info / Angle
	I>		Left
	OK/Enter/Select		OK
	X/Cancel		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Return		Back / Return
	Vol+		Vol+
	[=]/Start		Smart / List
	Vol-		Vol-
	CMSS		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>		Shift + Pause / Step / Freeze

