




 






 


 




 
 




 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | S.Mode |  | Sound / Title |
|  | Audio/Reveal |  | Audio / Lang I/II |
|  | Zoom/Subpage |  | Subtitle / EQ |
|  | P.Mode |  | Picture / Format |
|  | Size |  | Zoom / Size |
|  | Sleep |  | Sleep / Timer |
|  | D.Menu |  | D.Menu / Top |
|  | Text |  | Text / Goto |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|------------------|
|  | Input |  | AV / Input / RDS |
|  | LCD Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Index |  | Info / Angle |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | DVD Setup |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Display |  | Display / Media |
|  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |



