








 





 

 

 

 

 

 

 



 









**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle
	Power		Power
	Green/List		Green / APP / Repeat
	Blue/[ ]		Blue / Prime Video / Random
	Red		Red / Netflix / Search
	Up		Up
	Text		Setup / OPT /
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-





**Originalfernbedienung    Ersatzfernbedienung**

	PR-		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/-/--		0
	<<		>> / Tune+
	Play		Play / Slow
	>>		I<< / Preset-
	Rec		Rec / Rec Mode





Originalfernbedienung Ersatzfernbedienung




	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung





 

 

 

 

 

 

 

 

 

 



 












**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle
	Power		Power
	Green/List		Green / APP / Repeat
	Blue/[ ]		Blue / Prime Video / Random
	Red		Red / Netflix / Search
	Up		Up
	Text		Setup / OPT /
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-



**Originalfernbedienung    Ersatzfernbedienung**

	PR-		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	<<		>> / Tune+
	Play		Play / Slow
	>>		I<< / Preset-
	Rec		Rec / Rec Mode
	Stop		Stop / Hold





Originalfernbedienung Ersatzfernbedienung




	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung





 

 







 

 

 

 

 

 

 












**Originalfernbedienung Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle
	Power		Power
	Green/List		Green / APP / Repeat
	Blue/[ ]		Blue / Prime Video / Random
	Red		Red / Netflix / Search
	Up		Up
	Text		Setup / OPT /
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-





**Originalfernbedienung Ersatzfernbedienung**

	PR-		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/-/-		0
	<<		>> / Tune+
	Play		Play / Slow
	>>		I<< / Preset-
	Rec		Rec / Rec Mode





Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

