



 

 









 





















Originalfernbedienung Ersatzfernbedienung

	TV/RAD		TV/Radio /
	Power		Power
	Input		AV / Input / RDS
	AV Mode		Picture / Format
	Power Saving		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Mute		Mute / Dimmer
	P+/Page Up		CH+ / Page+
	Vol-		Vol-
	P-/Page Down		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return / Exit		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text/[≡]		Text / Goto





Originalfernbedienung Ersatzfernbedienung

	T.OPT		Setup / OPT /
	Subtitle		Subtitle / EQ
	FAV		Fav / Marker / PC
	Q.Menu		D.Menu / Top
	Info		Info / Angle
	Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

