



Originalfernbedienung	Ersatzfernbedienung
	Power
	Exit / Cancel / Clear
	CH+ / Page+
	CH- / Page-
	Subtitle / EQ
	>>I / Preset+
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	Vol+
	Vol-
	0
	1
	2
	3
	4
	5

Originalfernbedienung	Ersatzfernbedienung
	6
	7
	8
	9

