

 



 

 










 








 
 





Originalfernbedienung Ersatzfernbedienung

|   |             |   |                 |
|---|-------------|---|-----------------|
|    | Power On    |    | Power           |
|    | Power Off   |    | Shift + Power   |
|    | Speakers 1  |    | CH+ / Page+     |
|    | Speakers 2  |    | CH- / Page-     |
|    | PHONO       |    | Shift + 8       |
|    | CD          |    | Shift + 3       |
|    | VID 1       |    | Shift + 1       |
|    | VID 2       |    | Shift + 2       |
|    | VID 3       |    | Shift + 4       |
|    | FM          |    | Shift + 6       |
|   | AM          |   | Shift + 7       |
|  | TAPE MON    |  | Shift + 5       |
|  | FM Mode     |  | Display / Media |
|  | Auto Preset |  | Smart / List    |
|  | 1           |  | 1               |
|  | 2           |  | 2               |
|  | 3           |  | 3               |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                       |
|---|-------------|---|-----------------------|
|    | 4           |    | 4                     |
|    | 5           |    | 5                     |
|    | 6           |    | 6                     |
|    | 7           |    | 7                     |
|    | 8           |    | 8                     |
|    | 9           |    | 9                     |
|    | Direct      |    | Guide / EPG / -/-     |
|    | 0           |    | 0                     |
|    | Clear       |    | Exit / Cancel / Clear |
|    | Memory      |    | Fav / Marker / PC     |
|   | Up          |   | Up                    |
|  | Menu        |  | Menu / Home           |
|  | Left        |  | Left                  |
|  | OK          |  | OK                    |
|  | Right       |  | Right                 |
|  | Preset Scan |  | Info / Angle          |
|  | Down        |  | Down                  |





Originalfernbedienung Ersatzfernbedienung

|  |             |   |                       |
|--|-------------|---|-----------------------|
|  | Vol+        |   | Vol+                  |
|  | Mute        |   | Mute / Dimmer         |
|  | Tune Up     |   | >> / Tune+            |
|  | Vol-        |   | Vol-                  |
|  | Tune Down   |   | << / Tune-            |
|  | Preset Down |   | I<< / Preset-         |
|  | Preset Up   |   | >>I / Preset+         |
|  | Dimmer      | + | Shift + Mute / Dimmer |
|  | Sleep       |   | Sleep / Timer         |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

