



































Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play/Index		Play / Slow
Pause		Pause / Step / Freeze
<</Reveal		<< / Tune-
>>/Hold		>> / Tune+
AD		Audio / Lang I/II
Subtitle		Subtitle / EQ
Text		Text / Goto
Source		AV / Input / RDS
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
OK		OK
Right		Right
Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

Down		Down
Back		Back / Return
Vol+		Vol+
Smart Tv		Smart / List
P+		CH+ / Page+
Vol-		Vol-
Google Play		Display / Media
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
Guide		Guide / EPG / -/--					
0		0					
Red		Red / Netflix / Search					
Green		Green / APP / Repeat					
Yellow		Yellow / YouTube / Repeat					
Blue		Blue / Prime Video / Random					
Home		Shift + Menu /					
Netflix		Shift + Red / Netflix /					
YouTube		Shift + Yellow / YouTube /					
prime video		Shift + Blue / Prime					

