


















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Return TV		TV/Radio /
Menu video		D.Menu / Top
Update		Setup / OPT /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down

Originalfernbedienung Ersatzfernbedienung

Back		Back / Return
Volume+		Vol+
Reveal		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0/10		0



