












 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Power |  | Power |
|  | Vol+ |  | Vol+ |
|  | Home |  | Menu / Home |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | P- |  | CH- / Page- |
|  | Guide |  | Guide / EPG / -/-- |
|  | Input |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Smart Colors |  | Smart / List |
|  | Play |  | Play / Slow |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------------|
|  | Stop |  | Stop / Hold |
|  | 123# |  | 1 |
|  | prime video |  | Blue / Prime Video / Random |
|  | Netflix |  | Red / Netflix / Search |
|  | FPay |  | Yellow / YouTube / Repeat |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

