



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	Back		Back / Return
	Start (Windows)		Smart / List
	i More		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down

**Originalfernbedienung Ersatzfernbedienung**

	Volume+		Vol+
	Mute		Mute / Dimmer
	CH/PG+		CH- / Page-
	Volume-		Vol-
	CH/PG-		CH+ / Page+
	Recorded TV		Display / Media
	Guide		Guide / EPG / -/-
	Live TV		TV/Radio /
	Format / DVD		D.Menu / Top
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	9		9				
	*		Shift + Guide / EPG / -/--				
	0		0				
# button"/>	#		Shift + Fav / Marker / PC				
	Clear		Exit / Cancel / Clear				
	[T] Teletext		Text / Goto				
	Enter		Fav / Marker / PC				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

