
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Recall		Fav / Marker / PC
	Disp		Display / Media
	Input		AV / Input / RDS
	Zoom		Zoom / Size

 




 

 









Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Auto		Smart / List
	Angle		Info / Angle
	I<<		I<< / Preset-





 




 

 











Originalfernbedienung Ersatzfernbedienung

	>>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Open/Close		Eject / Surround
	Play/Pause		Play / Slow
	>/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	Red/Setup		Red / Netflix / Search
	Green/Menu		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/Lang		Blue / Prime Video / Random




 


 


Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Zoom		Zoom / Size
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Angle		Info / Angle
	Red/Setup		Red / Netflix / Search
	Green/Menu		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/Lang		Blue / Prime Video / Random
	Disp		Display / Media

