























 














Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
H/V Play		Play / Slow
Dec/Pause		Pause / Step / Freeze
East		Rec / Rec Mode
Lang./Rewind		<< / Tune-
LNB F.Forward		>> / Tune+
West		<< / Preset-
Dev		>> / Preset+
Lang./Rewind		Sound / Title
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
Sleep Timer		Sleep / Timer
TV		TV/Radio /
Opt?		Setup / OPT /
Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung


















TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
TV/SAT		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
2abc	 2	Video	 +  Shift + 4
3def	 3	Epg	 +  Shift + Guide / EPG / -/--
4ghi	 4	App	 +  Shift + Green / APP /
5jkl	 5		
6mno	 6		
7pqrm	 7		
8tuv	 8		
9wxyz	 9		
Guide Pilote	 Guide / EPG / -/--		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 +  Shift + Pause / Step /		
TV	 +  Shift + 1		



Originalfernbedienung Ersatzfernbedienung




PWR On/Off		Power
Mute		Mute / Dimmer
H/V Play		Play / Slow
Dec/Pause		Pause / Step / Freeze
East		Rec / Rec Mode
Lang./Rewind		<< / Tune-
LNB F.Forward		>> / Tune+
West		<< / Preset-
Dev		>> / Preset+
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
Sleep Timer		Sleep / Timer
TV		TV/Radio /
Sys/Serv		D.Menu / Top
Opt?		Setup / OPT /
Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung


















TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
TV/SAT		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1



Originalfernbedienung Ersatzfernbedienung





PWR On/Off		Power
Mute		Mute / Dimmer
H/V Play		Play / Slow
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
TV		TV/Radio /
Opt?		Setup / OPT /
Text		Text / Goto
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung


















Menu Down		Down
Back		Back / Return
Volume+		Vol+
TV/SAT		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9



Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
TV		TV/Radio /
Text		Text / Goto
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return

Originalfernbedienung Ersatzfernbedienung

Volume+		Vol+
TV/SAT		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0



