
















































 









Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Freeze		Pause / Step / Freeze
East		Rec / Rec Mode
Lang./Rewind		<< / Tune-
Lang./Rewind		Sound / Title
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
		Eject / Surround
Zoom		Zoom / Size
Sleep Timer		Sleep / Timer
Scan/Setup		D.Menu / Top
Opt?		Setup / OPT /
Text		Text / Goto
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up

Originalfernbedienung Ersatzfernbedienung

Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
5jkl	 5	App	 Shift + Green / APP /
6mno	 6		
7pqrm	 7		
8tuv	 8		
9wxyz	 9		
Guide Pilote	 Guide / EPG / -/--		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
PWR On/Off	 +  Shift + Power		
TV	 +  Shift + 1		
Video	 +  Shift + 4		
Epg	 +  Shift + Guide / EPG / -/--		
TV/SAT	 +  Shift + 0		

