


















Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Reveal		Play / Slow
Update		Pause / Step / Freeze
Txt Stop		Stop / Hold
Tone-		<< / Tune-
Tone+		>> / Tune+
Contrast-		l<< / Preset-
Contrast+		>>l / Preset+
Color- S.Std		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Surround		Eject / Surround
Color+ P.Std		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /

Originalfernbedienung Ersatzfernbedienung


 
 





 
 





 
Menu video		D.Menu / Top
Store		Setup / OPT /
Text		Text / Goto
Input		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Swap		Back / Return
Volume+		Vol+
Output		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-



Originalfernbedienung Ersatzfernbedienung

Disp		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

Blue		Blue / Prime Video / Random
Tune-		Shift + << /
Tune+		Shift + >> /
Bright- Sys		Shift + I<< / Preset-
Bright+ Mode		Shift + >>I / Preset+
Nicam/Mono		Shift + Audio / Lang I/II
Mix Scan		Shift + Text /
TV/AV		Shift + AV / Input / RDS
Level L		Shift + Left
Aft/Caf		Shift + OK
Level R/Woofer		Shift + Right
Back		Shift + Back / Return
Audio+		Shift + Vol+
Audio-		Shift + Vol-
Display		Shift + Display / Media
Search		Shift + Red / Netflix /

