



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Tuner/Band	+	Shift + 6
	DVD	+	Shift + 2
	Portable	+	Shift + 3
	USB	+	Shift + 8
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EQ	+	Shift + Subtitle / EQ


Originalfernbedienung Ersatzfernbedienung

	XDSS plus		Smart / List
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Return		Back / Return
	Setup		Setup / OPT /
	Up/Preset+		Up
	Display		Display / Media
	Left/Tun.-		Left
	Select/Enter		OK
	Right/Tun.+		Right
	Menu		Menu / Home
	Down/Preset-		Down
	Title	+	Shift + Sound / Title
	Prog. Memo		TV/Radio /
	<</Scan-		<< / Tune-
	>>/Scan+		>> / Tune+







Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Repeat		Green / APP / Repeat
	</Slow-		CH- / Page-
	!>/Slow+		CH+ / Page+
	Repeat A/B		Yellow / YouTube / Repeat
	!<</Skip-		!<< / Preset-
	>>/Skip+		>>! / Preset+
	Volume-		Vol-
	Stop/Mo/ST		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Clear		Exit / Cancel / Clear
	Zoom		Zoom / Size
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Sleep		Sleep / Timer
	RDS		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	PTY		Picture / Format

