


Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Prog		TV/Radio /
	Display		Display / Media
	TFT On/Off		Power
	N/P		Smart / List
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Language		Audio / Lang I/II
	7		7
	8		8
	9		9
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	Time		Sleep / Timer
	Up		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Step		Pause / Step / Freeze
	Down		Down
	Function		D.Menu / Top
	Menu/PBC		Menu / Home
	Title		Sound / Title
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Return		Back / Return
	L/R		Text / Goto




Originalfernbedienung Ersatzfernbedienung

	Zoom		Zoom / Size
	Slow		Shift + Play /
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

