



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Quality/P- |  | CH- / Page- |
|  | 0 |  | 0 |
|  | Recall/P+ |  | CH+ / Page+ |
|  | Menu |  | Menu / Home |
|  | Exit |  | Exit / Cancel / Clear |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------------|
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Sel |  | Smart / List |
|  | Down |  | Down |
|  | FAV |  | Fav / Marker / PC |
|  | Audio |  | Audio / Lang I/II |
|  | Pause |  | Pause / Step / Freeze |
|  | Red/Subtitle |  | Red / Netflix / Search |
|  | AV |  | AV / Input / RDS |
|  | TV/R |  | TV/Radio / |
|  | Blue/Info |  | Blue / Prime Video / Random |
|  | Green/PIP |  | Green / APP / Repeat |
|  | Yellow/EPG |  | Yellow / YouTube / Repeat |
| | | | |
| | | | |
| | | | |

