






 






 







 


 


 











 

 

 
 



 


 
 









Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	OSD		Display / Media
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	Video		Shift + 4
	1		1
	2		2
	3		3
	Return		Back / Return
	4		4
	5		5
	6		6
	Default		Smart / List
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear




 

 

 




 

 

 

 

 
 
 



Originalfernbedienung Ersatzfernbedienung

	Goto		Text / Goto
	0		0
	10+		Guide / EPG / -/--
	Prog		TV/Radio /
	Mark		Fav / Marker / PC
	Menu/PBC		Menu / Home
	Title		Sound / Title
	N/P		Red / Netflix / Search
	Up		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Play		Play / Slow
	Down		Down
	Zoom		Zoom / Size
	I<<		I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Angle		Info / Angle
	Lang/L/R		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Step		Shift + Pause / Step / Step /
	Slow		Shift + Play /
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung