















 



























 







 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB		Shift + 8
	Reset		Smart / List
	Open/Close		Eject / Surround
	Language		Audio / Lang I/II
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	Return		Back / Return
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Vol-		Vol-
	Step		Shift + Pause / Step / Freeze
	Slow		Shift + Play /
	PBC		D.Menu / Top
	Mute		Mute / Dimmer
	Setup		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	OSD		Display / Media
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	R/L		Blue / Prime Video / Random
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	I<<		I<< / Preset-
	N/P		Sleep / Timer
	Stop		Stop / Hold
	>>		>> / Tune+
	>>I		>>I / Preset+
	V-Mode		Picture / Format





Originalfernbedienung Ersatzfernbedienung

1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
10	10	HDMI - SAT 0	0
10+	10+	GUIDE EPG	Guide / EPG / -/--
GOTO	Goto	TEXT	Text / Goto
PROG	Prog	PROGRAM TV/RADIO	TV/Radio /
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
MENU	Menu	HOME MENU	Menu / Home

Originalfernbedienung Ersatzfernbedienung

