


Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--
	0		0
	T/Search		Red / Netflix / Search
	EPM		Picture / Format
	EAM		Sound / Title
	<I Slow		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Slow I>		CH+ / Page+
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<< Skip		I<< / Preset-
	<</REV		<< / Tune-
	FWD/>>		>> / Tune+
	Skip >>I		>>I / Preset+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down

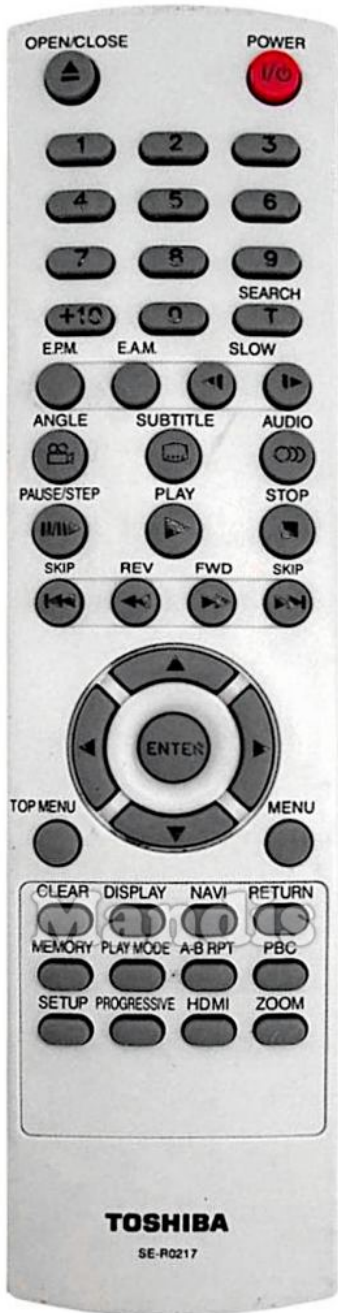


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Clear		Exit / Cancel / Clear
	Display		Display / Media
	Navi		Smart / List
	Return		Back / Return
	Memory		Fav / Marker / PC
	Play Mode	+	Shift + Play /
	A-B RPT		Yellow / YouTube / Repeat
	PBC		Blue / Prime Video / Random
	Setup		Setup / OPT /
	Progressive		Text / Goto
	HDMI	+	Shift + 0
	HDMI		AV / Input / RDS
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

