



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	List		Shift + Smart / List
	Vol+		Vol+
	TV		TV/Radio /
	P+		CH+ / Page+






 

 


 
 

 

 









 










Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Smart		Smart / List
	P-		CH- / Page-
	Home		Shift + Menu /
	Up		Up
	=		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	←		Back / Return
	Down		Down
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Zoom		Zoom / Size
	*		D.Menu / Top
	Info		Info / Angle
	EPG		Guide / EPG / -/-








**Originalfernbedienung Ersatzfernbedienung**

	Lang/AD		Audio / Lang I/II
	USB	 + 	Shift + 8
	Subt.		Subtitle / EQ
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<		I<< / Preset-
	Stop		Stop / Hold
	>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Netflix	 + 	Shift + Red / Netflix / Search

**Originalfernbedienung Ersatzfernbedienung**

	YouTube	 + 	Shift + Yellow / YouTube /

