

 

 

 

 

 



 



 

 



 

 



 











 

 





 

 

 







 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	- [ / ] / P.STD		Smart / List
	- [ I ] / S.STD		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	Program+		CH+ / Page+
	Vol-		Vol-
	Program-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Aspect		Picture / Format
	I/II		Audio / Lang I/II
	[ / = ] / Mix		Subtitle / EQ
	[ = x ] / Cancel		TV / Radio /



