












 

 




 

 





 

 



 

 



 





 











Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	DVD		Shift + 2
	Tuner		Shift + 6
	AUX		Shift + 7
	Subtitle		Subtitle / EQ
	Language		Shift + Audio / Lang I/II
	Title		Sound / Title
	Return		Back / Return
	Goto		Text / Goto
	Zoom		Zoom / Size
	Menu/PBC		Menu / Home
	Angle		Info / Angle
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	Display		Display / Media
	7		7
	8		8
	9		9
	NTSC/PAL		Picture / Format
	+10		Guide / EPG / -/-
	0		0
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Open/Close		Eject / Surround
	Up		Up
	Left		Left
	Enter		OK
	Right		Right



