



















 

 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Hold		Shift + Stop /
	TVG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	<<		<< / Tune-
	Subpage		Eject / Surround
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	FAV		Fav / Marker / PC
	>>I/Index		>>I / Preset+
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Aspect		Picture / Format
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+





Originalfernbedienung Ersatzfernbedienung

VOL -	Vol-	VOL -	Vol-
INFO i	Info	MEDIA DISPLAY	Display / Media
CH -	CH-	CH PAGE -	CH- / Page-
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
-/--	-/--	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/--
0	0	HDMI - SAT 0	0
↻	Recall	RETURN BACK	Back / Return

Originalfernbedienung Ersatzfernbedienung