



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	Freeze		Pause / Step / Freeze
	4		4
	5		5
	6		6
	DTV/Radio		TV/Radio /
	7		7
	8		8

**Originalfernbedienung    Ersatzfernbedienung**

	9		9
	FAV / Slow		Shift + Play /
	FAV / Slow		Fav / Marker / PC
	Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	CH.List / Step		Smart / List
	CH.List / Step		Shift + Pause / Step /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	Prog-		CH- / Page-
	Prog+		CH+ / Page+





**Originalfernbedienung Ersatzfernbedienung**

	LCD Menu		Menu / Home
	EPG / DVD		Guide / EPG / -/-
	EPG / DVD		D.Menu / Top
	Audio Language		Audio / Lang I/II
	Recall / DVD		Back / Return
	Recall / DVD		Setup / OPT /
	TXT / Title		Text / Goto
	TXT / Title		Shift + Sound / Title
	Index / Angle		Shift + Info / Angle
	Size / Goto		Shift + Text /
	Size / Goto		Shift + Zoom /
	Subtitle		Subtitle / EQ
	Mix / Open/Close		Eject / Surround
	Reveal /		Play / Slow
	Hold / Stop		Stop / Hold
	Subpage / A-B		Shift + Yellow / YouTube /
	Red/Left		Red / Netflix / Search

**Originalfernbedienung Ersatzfernbedienung**

	Red/Left		Left / Tune-
	Green/Right		Green / APP / Repeat
	Green/Right		Right / Tune+
	Yellow/Left		Yellow / YouTube / Repeat
	Yellow/Left		Left / Preset-
	Blue/Right		Blue / Prime Video / Random
	Blue/Right		Right / Preset+
	Prog		Shift + TV/Radio / Program
	Repeat		Shift + Green / APP /
	Display		Display / Media
	USB/Disc		Shift + 8

