




 


 

 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-------|-------------------------------------------------------------------------------------|--------------------|
|  | Power |  | Power |
|  | Audio |  | Audio / Lang I/II |
|  | Mute |  | Mute / Dimmer |
|  | Tv/R |  | TV/Radio / |
|  | Sub-T |  | Subtitle / EQ |
|  | EPG |  | Guide / EPG / -/-- |
|  | Text |  | Text / Goto |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Favor |  | Fav / Marker / PC |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-------|---------------------------------------------------------------------------------------|-----------------------|
|  | 0 |  | 0 |
|  | Last |  | Back / Return |
|  | Menu |  | Menu / Home |
|  | Exit |  | Exit / Cancel / Clear |
|  | Up |  | Up |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | Info |  | Info / Angle |
|  | CH- |  | CH- / Page- |
|  | Down |  | Down |
|  | Mode |  | Smart / List |
|  | PVR |  | Display / Media |
|  | USB |  | Shift + 8 |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|-----------------------|--------|---------------------|-----------------------------|-----------------------|--|---------------------|--|
| | Play | | Play / Slow | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | Red | | Red / Netflix / Search | | | | |
| | l<< | | l<< / Preset- | | | | |
| | Yellow | | Yellow / YouTube / Repeat | | | | |
| | >>l | | >>l / Preset+ | | | | |
| | Stop | | Stop / Hold | | | | |
| | Green | | Green / APP / Repeat | | | | |
| | << | | << / Tune- | | | | |
| | >> | | >> / Tune+ | | | | |
| | Blue | | Blue / Prime Video / Random | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

