





































Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	Display		Display / Media
	Scroll		Subtitle / EQ
	Continue Play Mode/A		Red / Netflix / Search
	Shuffle Play		Sound / Title
	Program/C		TV/Radio /
	D		Blue / Prime Video / Random
	E		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8




Originalfernbedienung Ersatzfernbedienung

	9		9
	10		0
	11		Guide / EPG / -/-
	12		Fav / Marker / PC
	13		Shift + 1
	14		Shift + 2
	15		Shift + 3
	16		Shift + 4
	17		Shift + 5
	18		Shift + 6
	19		Shift + 7
	20		Shift + 8
	21		Shift + 9
	22		Shift + Guide / EPG / -/-
	23		Shift + 0
	24		Shift + Fav / Marker / PC
	25		Shift + Info / Angle





Originalfernbedienung Ersatzfernbedienung

	>25		D.Menu / Top
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	A.Space		Zoom / Size
	M.Scan		Picture / Format
	Name Write		Menu / Home
	Char Write		Info / Angle
	Num Write		Audio / Lang I/II
	Clear		Exit / Cancel / Clear
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Rec Pause		Shift + Pause / Step /
	<<		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	CD-Sync		AV / Input / RDS
	Rec-IT		Shift + Rec / Rec Mode
	Erase		Up
	Divide		Left
	Combine		Down
	Move		Right
	Enter		OK
	Cancel		Shift + Exit / Cancel / Clear
	Undo		Mute / Dimmer






**Originalfernbedienung Ersatzfernbedienung**

	Eject		Eject / Surround
	Power		Power
	Display		Display / Media
	Continue Play Mode/A		Red / Netflix / Search
	Shuffle Play		Sound / Title
	Program/C		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	11		Guide / EPG / -/--

**Originalfernbedienung Ersatzfernbedienung**

	12		Fav / Marker / PC
	13		Shift + 1
	14		Shift + 2
	15		Shift + 3
	16		Shift + 4
	17		Shift + 5
	18		Shift + 6
	19		Shift + 7
	20		Shift + 8
	21		Shift + 9
	22		Shift + Guide / EPG / -/--
	23		Shift + 0
	24		Shift + Fav / Marker / PC
	25		Info / Angle
>25 button"/>	>25		D.Menu / Top
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat





**Originalfernbedienung Ersatzfernbedienung**

	A.Space		Zoom / Size
	M.Scan		Picture / Format
	Clear		Exit / Cancel / Clear
	Loop		Back / Return
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Rec Pause	+	Shift + Pause / Step /
	<<		<< / Tune-
	>>		>> / Tune+
	CD-Sync		AV / Input / RDS
	Rec-IT	+	Shift + Rec / Rec Mode

**Originalfernbedienung Ersatzfernbedienung**