



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|-------------------|
| | Sleep | | Sleep / Timer |
| | Power | | Power |
| | Scene 1 | | 1 |
| | Scene 2 | | 2 |
| | Scene 3 | | 3 |
| | Scene 4 | | 4 |
| | Straight | | Audio / Lang I/II |
| | Pure Direct | | Subtitle / EQ |
| | Enhancer | | Text / Goto |
| | Sur.Decode | | Picture / Format |
| | < Program | | CH- / Page- |
| | Program > | | CH+ / Page+ |
| | Input Up | | Shift + Up |
| | Tuner | | 6 |
| | Volume+ | | Vol+ |
| | USB | | 8 |
| | Input Down | | Shift + Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|-----------------------------|
| | NET | | Fav / Marker / PC |
| | Volume- | | Vol- |
| | Bluetooth | | 9 |
| | Mute | | Mute / Dimmer |
| | Setup | | Setup / OPT / |
| | Up | | Up |
| | Option | | Shift + Setup / OPT / Tools |
| | Left | | Left |
| | Enter | | OK |
| | Right | | Right |
| | Return | | Back / Return |
| | Down | | Down |
| | Display | | Display / Media |
| | Top Menu | | D.Menu / Top |
| | Home | | Menu / Home |
| | Pop-Up/Menu | | Shift + Menu / |
| | Red | | Red / Netflix / Search |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------------------|
|  | Sleep |  | Sleep / Timer |
|  | Power |  | Power |
|  | Scene 1 |  | 1 |
|  | Scene 2 |  | 2 |
|  | Scene 3 |  | 3 |
|  | Scene 4 |  | 4 |
|  | Input Up |  | Shift + Up |
|  | Tuner |  | 6 |
|  | Volume+ |  | Vol+ |
|  | USB |  | 8 |
|  | Input Down |  | Shift + Down |
|  | NET |  | Fav / Marker / PC |
|  | Volume- |  | Vol- |
|  | Bluetooth |  | 9 |
|  | Mute |  | Mute / Dimmer |
|  | Up |  | Up |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------------|
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Return |  | Back / Return |
|  | Down |  | Down |
|  | Display |  | Display / Media |
|  | Top Menu |  | D.Menu / Top |
|  | Home |  | Menu / Home |
|  | Pop-Up/Menu |  | Shift + Menu / |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | I<< |  | I<< / Preset- |
|  | Play/Memory |  | Play / Slow |
|  | >>I |  | >>I / Preset+ |
|  | << Tuning |  | << / Tune- |
|  | Stop/Mode |  | Stop / Hold |



