













 




Originalfernbedienung Ersatzfernbedienung



PWR On/Off		Power
Mute		Mute / Dimmer
Subt.List		Subtitle / EQ
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media

Originalfernbedienung Ersatzfernbedienung

CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/-
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random



Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
Epg	 +  Shift + Guide / EPG / +/-

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

