 






 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		0
	Media Player		Guide / EPG / -/--
	Blu-ray/DVD		2
	Game		Fav / Marker / PC
	AUX		7
	Tuner		6
	Phono		5
	TV Audio		1
	CD		3
	USB		8
	Bluetooth		9
	Internet Radio		4
	Heos		Smart / List
	CH+		CH+ / Page+
	ECO		Zoom / Size
	Volume+		Vol+











 








Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	I<</Tune-		I<< / Preset-
	I<</Tune-		<< / Tune-
	Play/Pause		Play / Slow
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		0
	Media Player		Guide / EPG / -/--
	Blu-ray/DVD		2
	Game		Fav / Marker / PC
	AUX		7
	Tuner		6
	Phono		5
	TV Audio		1
	CD		3
	USB		8
	Bluetooth		9
	Internet Radio		4
	Heos		Smart / List
	CH+		CH+ / Page+
	Volume+		Vol+
	CH-		CH- / Page-



 

 



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	I<</Tune-		I<< / Preset-
	I<</Tune-		<< / Tune-
	Play/Pause		Play / Slow
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		>> / Tune+
	Band		Display / Media
	Stop/Mode		Stop / Hold
	Memory		Eject / Surround
	Smart Select 1		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat
	Smart Select 4		Blue / Prime Video / Random
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

