
 

 
 




 

 
 



 
 

 
 
 

 


 


 







 


 


 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

 
	Power		Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Movie		MEDIA
	FAV/Repeat		P/C / FAV
	Menu		MENU
	Lang		Audio
	EPG		-/-- / EPG

Originalfernbedienung Ersatzfernbedienung

	Info		INFO
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	CH+		CH +
	CH-		CH -
	Vol+		VOL +
	Vol-		VOL -
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	I<		First
	I>		Last





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	<</Alt		Rewind				
	>>/List		Fast Forward				
	Red		Red (A)				
	Blue		Blue (D)				
	Green		Green (B)				
	Yellow		Yellow (C)				
	Text		TEXT				
	Tv/Radio		TV/R				
	Audio		OPT+				
	Subt		Subt.				
	Zoom		WIDE				
	Device		SRC				
	Time Shift		V-FOR				
	File		BACK				
	Mosaic		VOD				
	A.Scan/Goto	 + 	Shift + VOD				

