



 




 








| Originalfernbedienung   | Ersatzfernbedienung | Originalfernbedienung   | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|      | Power STB           |      | Power               |
|      | <<                  |      | <<                  |
|      | Play                |      | Play                |
|      | Pause               |      | Pause               |
|      | >>                  |      | >>                  |
|      | l<                  |      | l<<                 |
|      | >l                  |      | >>l                 |
|      | Stop                |      | Stop                |
|      | Red                 |      | Red                 |
|      | Green               |      | Green               |
|     | Yellow              |     | Yellow              |
|    | Blue                |    | Blue                |
|    | Video               |    | Format              |
|    | Menu                |    | Menu                |
|    | i                   |    | Info                |
|    | Up                  |    | Up                  |
|    | Left                |    | Left                |
|    | OK                  |    | Ok                  |
|    | Right               |    | Right               |
|    | Down                |    | Down                |
|    | Back                |    | Back                |
|    | Guide               |    | Guide               |
|    | X                   |    | Exit                |
|    | Vol+                |    | Vol +               |
|    | Vol-                |    | Vol -               |
|    | ↑                   |    | Shift + Up          |
|   | ↓                   |   | Shift + Down        |
|  | CH+                 |  | Ch +                |
|  | CH-                 |  | Ch -                |
|  | Mute                |  | Mute                |
|  | P < P               |  | Pre Ch              |
|  | 1                   |  | 1                   |
|  | 2                   |  | 2                   |

 




 

 






 







**Originalfernbedienung Ersatzfernbedienung**

|             |   |         |
|-------------|---|---------|
| PWR On/Off  |    | Power   |
| Epg         |    | Guide   |
| Subt.List   |    | Subt    |
| Opt?        |    | Options |
| App         |    | Media   |
| Sleep Timer |    | Sleep   |
| TV          |    | TV/R    |
| Text        |    | Text    |
| Zoom        |    | Eject   |
| Menu        |   | Menu    |
| Menu Up     |  | Up      |
| Menu Left   |  | Left    |
| OK Enter    |  | Ok      |
| Menu Right  |  | Right   |
| Menu Down   |  | Down    |
| Back        |  | Back    |
| CH/Page+    |  | Ch +    |

**Originalfernbedienung Ersatzfernbedienung**


 


 



 


 

 

 

|           |   |        |
|-----------|---|--------|
| Audio     |    | Dual   |
| CH/Page-  |    | Ch -   |
| 1. ?      |    | 1      |
| 2abc      |    | 2      |
| 3def      |    | 3      |
| 4ghi      |    | 4      |
| 5jkl      |    | 5      |
| 6mno      |    | 6      |
| 7pqrm     |    | 7      |
| 8tuv      |   | 8      |
| 9wxyz     |  | 9      |
| 0/10      |  | 0      |
| FAV Pref. |  | Pre Ch |
| Red       |  | Red    |
| Green     |  | Green  |
| Yellow    |  | Yellow |
| Blue      |  | Blue   |







 





**Originalfernbedienung Ersatzfernbedienung**

|            |   |         |
|------------|---|---------|
| PWR On/Off |    | Power   |
| Mute       |    | Mute    |
| Opt?       |    | Options |
| App        |    | Media   |
| Subt.List  |    | Subt    |
| Info       |    | Info    |
| Video      |    | D. Menu |
| Zoom       |    | Eject   |
| Menu       |    | Menu    |
| Menu Up    |    | Up      |
| Menu Left  |   | Left    |
| OK Enter   |  | Ok      |
| Menu Right |  | Right   |
| Exit       |  | Exit    |
| Menu Down  |  | Down    |
| Back       |  | Back    |
| Volume+    |  | Vol +   |

**Originalfernbedienung Ersatzfernbedienung**

|              |   |        |
|--------------|---|--------|
| CH/Page+     |    | Ch +   |
| Volume-      |    | Vol -  |
| Audio        |    | Dual   |
| CH/Page-     |    | Ch -   |
| 1. ?         |    | 1      |
| 2abc         |    | 2      |
| 3def         |    | 3      |
| 4ghi         |    | 4      |
| 5jkl         |    | 5      |
| 6mno         |    | 6      |
| 7pqrm        |   | 7      |
| 8tuv         |  | 8      |
| 9wxyz        |  | 9      |
| Guide Pilote |  | Guide  |
| 0/10         |  | 0      |
| FAV Pref.    |  | Pre Ch |
| Red          |  | Red    |





| Originalfernbedienung | Ersatzfernbedienung   | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---------------------|
| Green                 |    | Green                 |                     |
| Yellow                |    | Yellow                |                     |
| Blue                  |    | Blue                  |                     |
| Dev                   |    | List                  |                     |
| West                  |    | I<<                   |                     |
| Dec/Pause             |    | Pause                 |                     |
|                       |    | Shift + Ch +          |                     |
|                       |    | Shift + Ch -          |                     |
| Freeze                |    | Stop                  |                     |
| East                  |    | >>I                   |                     |
| LNB F.Forward         |   | >>                    |                     |
| Lang./Rewind          |  | <<                    |                     |
| H/V Play              |  | Play                  |                     |
|                       |   |                       |                     |
|                       |   |                       |                     |
|                       |   |                       |                     |
|                       |   |                       |                     |
|                       |   |                       |                     |

