 

 

 

 

 

 

 














 





 
 
 
 
 
 

 

 



 
 


 

 



 



 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Auto		Smart
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Display		Shift + Info
	Audio / Nicam		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	+/-		Shift + Guide
	Recall		Back
	Tv Menu		Menu
	Exit		Exit
	Guide		Guide
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	CH-		Ch -
	CH+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Text		Text
	<<		<<



