 

 

 
 
 

 

 
 
 
 
 
 
 
 
 

 
 
 
 



 

 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	I/II/Audio		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0

Originalfernbedienung Ersatzfernbedienung

	List/+10		Guide
	Recall/Program		Back
	Tv Menu		Menu
	Exit		Exit
	Goto/Text		Text
	Info/Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/DVD Setup		Red
	Green/A-B		Green





**Originalfernbedienung    Ersatzfernbedienung**

	Yellow/Angle		Yellow
	Blue/Repeat		Blue
	Subtitle		Subt
	Play/Hold		Play
	Pause		Pause
	Size		Format
	D.Dis/Reveal		3D
	D.Menu/Mix		D. Menu
	Zoom/Index	+	Shift + Eject
	I<</FAV		I<<
	>>I/Subpage		>>I
	Stop		Stop
	Tv/Radio		TV/R
	<<		<<
	>>		>>
	Eject/EPG		Eject

**Originalfernbedienung    Ersatzfernbedienung**