





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	List		Smart / List
	Recall		Back / Return
	Tv Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Info/Display		Display / Media
	Info/Display		Info / Angle
	Up		Up
	Left		Left
	OK/Enter		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+
	Red		Red / Netflix / Search





**Originalfernbedienung   Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Hold		Stop / Hold
	Size		Shift + Zoom /
	Reveal		D.Menu / Top
	Mix		Shift + Text /
	Zoom/Index		Zoom / Size
	FAV		Fav / Marker / PC
	Subpage		Eject / Surround
	Tv/Radio		TV/Radio /
	EPG		Guide / EPG / -/--

**Originalfernbedienung   Ersatzfernbedienung**