


**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec





Originalfernbedienung	Ersatzfernbedienung
TIMER	Timer: SHIFT + TIMER AV / Shift + AV
EDIT	Edit: APP MEDIA / Media
USB	USB: A / Red
DVD	DVD: B / Green
HDD	HDD: C / Yellow
DISC OPER	Disc Oper: E-MANUAL D.MENU / D. Menu
SLOW	Slow: SHIFT + II / Shift + Pause
RETURN	Return: RETURN BACK / Back
REPEAT	Repeat: REPEAT TEXT / Text
ZOOM	Zoom: SHIFT + ZOOM / Shift + Eject
CH+	CH+ / Ch +
CH-	CH- / Ch -
P/N	P/N: SEARCH TV/R / TV/R
AUDIO	Audio: SOUND DUAL / Dual
DV	DV: + VOL / Vol +
L/P	L/P: DISPLAY INFO / Info
MUTE	MUTE / Mute

Originalfernbedienung	Ersatzfernbedienung
TV	TV: VOL - / Vol -
TV	TV: D / Blue

