



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SD/USB- PVR		Smart / List
	Time		Sleep / Timer
	Mute		Mute / Dimmer
	Vol+		Vol+
	Source		AV / Input / RDS
	Ch+		CH+ / Page+
	Vol-		Vol-
	Mode		Picture / Format
	Ch-		CH- / Page-
	Tv/Radio		TV/Radio /
	Eject		Eject / Surround
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	L/R		Display / Media
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Subtitle / PC Auto		Subtitle / EQ
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Left		Left
	Ok		OK
	Right		Right
	Fav		Fav / Marker / PC
	>>		>> / Preset+
	Down		Down
	>>		>> / Tune+
	Epg		Guide / EPG / -/-
	I<<		I<< / Preset-
	TTX/MIX		Text / Goto
	Info/Display		Info / Angle
	Red/Dvd Menu		Red / Netflix / Search









Originalfernbedienung Ersatzfernbedienung

	Red/Dvd Menu		D.Menu / Top
	Green/Lang		Green / APP / Repeat
	Green/Lang	 + 	Shift + Audio / Lang I/II
	Yellow/Repeat		Yellow / YouTube / Repeat
	Yellow/Repeat	 + 	Shift + Green / APP /
	Blue/Dvd Setup		Blue / Prime Video / Random
	Blue/Dvd Setup		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	0		0
	Return		Back / Return

