



 



 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Recall		Back / Return
	Menu		Menu / Home
	Source		AV / Input / RDS
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Up/FAV+		Up
	Down/FAV-		Down
	Left		Left
	Right		Right
	Enter		OK
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Display		Display / Media
	Open/Close/Smart		Eject / Surround
	VOL+		Vol+
	Vol-		Vol-
	USB/Media		Shift + Display / Media
	Play/Pause/Text		Play / Slow
	Stop/Index		Stop / Hold
	Rec/Media2		Rec / Rec Mode
	I<</Hold		I<< / Preset-



