
















 






 


























 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	USB/Media 1		Display / Media
	USB/Media 1		Shift + 8
	Play/Pause/Text		Text / Goto
	Play/Pause/Text		Play / Slow
	Play/Pause/Text		Pause / Step / Freeze
	Stop/Index		Stop / Hold
	Rec/Media2		Rec / Rec Mode
	Rec/Media2		Shift + Display / Media
	I<</Hold		I<< / Preset-
	>>I/Size		>>I / Preset+
	<</S.Page		<< / Tune-
	>>/Reveal		>> / Tune+
	I-II/Nicam		Shift + Picture / Format
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ



















 















Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/Radio /
	i		Info / Angle
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Menu		Menu / Home
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Mouse		Shift + OK
	Smart		Smart / List
	Exit		Exit / Cancel / Clear
	CH+		CH+ / Page+
	EPG		Guide / EPG / -/-
	VOL+		Vol+
	CH-		CH- / Page-






Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Vol-		Vol-
	D.Setup		Setup / OPT /
	Picture		Picture / Format
	D.Menu		D.Menu / Top
	Sound		Sound / Title
	D.Title		Shift + Sound / Title
	P.Size		Zoom / Size
	D.Prog		Shift + TV/Radio / Program
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

