 



 










 

 
 

 
 

 

 

 

 

 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	Scan		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Fav / Marker / PC
	Vol+		Vol+
	MP		Display / Media
	Page+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Page-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/FAV		Red / Netflix / Search
	Green/SAT		Green / APP / Repeat
	Yellow/Audio		Yellow / YouTube / Repeat
	Blue/Tv/Radio		Blue / Prime Video / Random

