




 













 

 
 






 

 





 













 
 




 

 










Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Display		Info
	Picture		Shift + Format
	Sleep		Sleep
	Mode		Smart



 





 












Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	Mute		Mute
	Zoom		Eject
	Nicam/A2		Dual
	Sound		Shift + Dual
	Text		Text
	Cancel		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue





Originalfernbedienung Ersatzfernbedienung

	Mix	 + 	Shift + Text
	Size		Format
	Hold		Stop
	Reveal		Media
	Index		Options
	Subpage		Subt
	Up		Ch +
	Down		Ch -
	Left		Vol -
	Right		Vol +

Originalfernbedienung Ersatzfernbedienung

