




 
 
 

 
 


 



 












 

 

 






 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|----------------|
|  | POWER |  | Power |
|  | MUTE |  | Mute |
|  | P.MODE |  +  | Shift + Format |
|  | S.MODE |  | Dual |
|  | SLEEP |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |
|  | EXIT |  | Exit |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | INPUT |  | AV |
|  | MENU |  | Menu |
|  | RECALL |  | Pre Ch |
|  | < |  | Left |
|  | > |  | Right |
|  | ^ |  | Up |
|  | v |  | Down |
|  | ENTER |  | Ok |
|  | VOL+ |  | Vol + |
|  | VOL- |  | Vol - |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | RED/DVD |  | Red |
|  | GREEN/DVD |  | Green |
|  | YELLOW/TITLE |  | Yellow |
|  | BLUE/LANG |  | Blue |
|  | DISPLAY |  | Info |



