



































 

 





 





 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	FAV		Fav / Marker / PC





Originalfernbedienung Ersatzfernbedienung

	SAT		Shift + 0
	Tv/Radio		TV/Radio /
	Guide		Guide / EPG / -/--
	Freeze		Pause / Step / Freeze
	AUX In		AV / Input / RDS
	UHF		Display / Media
	Audio		Audio / Lang I/II
	Red		Red / Netflix / Search
	Yellow		Yellow / YouTube / Repeat
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Positioner		Setup / OPT /
	Audio R/L		D.Menu / Top
	OK		OK
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

