






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	FAV+		Shift + CH+ /
	FAV-		Shift + CH- /
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	SOMM.		Sleep / Timer
	Auto/Temps		Smart / List
	AV		AV / Input / RDS
	HDMI		Shift + 0
	Aspect		Shift + Picture / Format
	AFF.		Info / Angle
	Up		Up
	Source		Shift + AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	VAL.		OK
	Right		Right
	Sortie		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	ENR. Menu		D.Menu / Top
	9		9
	0		0



