
 


 
 

 







 




 
 



 


 
 


 
 
 

 












 

 







 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Vol Rs-/Effect		3D	
Sleep		Sleep	
Tape 2 Pre./eq		Options	
CD/Theater		Dual	
Funct./Direct		Smart	
CD Play		Play	
Tape 1 Hall/Ats		Subt	
CD Random		TV/R	
Repeat		Text	
Display		Info	
CD Rewind		<<	
CD F.FWD		>>	
CD Pause		Pause	
Volume+		Vol +	
Volume-		Vol -	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Tape 1 F.FWD		>>	
6 Ch/Geq		List	
Tape 1 Play	 + 	Shift + Play	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Store/Center-		Media	
Pr 7		7	
Pr 8		8	
Program		D. Menu	
Pr 9		9	
Mode		Guide	
Pr 0/10		0	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Tape 1 Stop	 + 	Shift + Stop	
Tape 2 Pre./eq	 	Options	
Input/Source	 	AV	
CD/Theater	 	Media	
Volume+	 	Vol +	
Tape 1 Hall/Ats	 	Info	
CD Play	 	Play	
CD Rewind		<<	
Funct./Direct	 	Menu	
Stop		Stop	
CD F.FWD		>>	
Volume-	 	Vol -	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Phono/Scan	 	Smart	
Pr 6		6	
Tape 1 Rew	 + 	Shift + <<	
Tape 1 Play	 +  	Shift + Play	
Tape 1 F.FWD	 + 	Shift + >>	
Pr 7		7	
Tuner/Bypass		Down	
Pr 8		8	
Band		Up	
Fm Mode/Disc		Ok	

