

 
 


 
 
 
 

 


 








 


 
 
 
 
 
 
 

 










 
 
 

 
 








 


 


 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Display		Info
	File		Format
	Menu Disc		D. Menu
	Eject Disc		Eject
	Repeat		List
	Shuffle		Sleep
	Zoom		Shift + Eject
	<<		<<
	Stop		Stop
	>>		>>
	I<		I<<
	Play / Pause		Play
	>I		>>I
	Option		Options
	Setup		Menu
	Caption		Subt
			Language
			Up
			Down
			Right
			Left
			Ok
			Vol +
			Vol -
			Shift + Smart
			Mute
			Back
			AV
			1
			2
			3
			Smart
			Dual
			Up
			Down
			Right
			Left
			Ok
			Vol +
			Vol -
			Shift + Smart
			Mute
			Back
			AV
			1
			2
			3
			Smart

