



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Display		Info
	<<		<<
	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	I<		I<<
	Stop		Stop
	>I		>>I
	Home		Smart
	Home		Menu
	Back		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Setup		Options
	Mode		Media
	♪		Shift + Dual
	Aa		Text
	Lang		Dual
	Recall		Pre Ch
	Zoom		Eject

