






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	DTV/VCR		Display / Media
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Audio		Audio / Lang I/II
	Recall		Back / Return
	Subtitle		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Tv/Radio		TV/Radio /
	Rec List		Smart / List
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Record		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

