



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	[]X		Smart
	EQ		Media
	Mute		Mute
	→[]←		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	[Z]		Format
	Camera		3D
	(Z)))))		Dual
	Time		AV
	Prog		Sleep
	Setup/Mem		Options
	Title		List
	Menu/PBC		Menu
	Return/Exit		Back
	Up		Up
	Down		Down
	Right/FAV+		Right
	Left/FAV-		Left
	Enter		Ok
	Function		Pre Ch
	Tv/Radio		TV/R
	DVD		D. Menu





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Stop		Stop				
	Play/Pause		Play				
	Slow		Pause				
	Info		Info				
	<</Tuning-		<<				
	>>/Tuning+		>>				
	I<</Channel-		I<<				
	>>I/Channel+		>>I				
	Teletext		Text				
	EPG	 SHIFT +  GUIDE	Shift + Guide				
	Vol+		Vol +				
	Vol-		Vol -				
	Red/Repeat		Red				
	Green/A-B		Green				
	Yellow/Zoom		Yellow				
	Blue/Clear		Blue				

